



## Bulletin: GWR King Class

**Address** 3  
**Manufacturer** Locomansounds  
**Project number** Class King  
**Project version** 1809 0201 90 201

AUX 1 = firebox flicker (preset to LED)

AUX 2 = preset to Seuthe smoker

AUX 3 = uncoupler (mapped but not configured)

Key	Function	Sound slots	Volume CVs	Volume values
F0	Lights			
F1	Drive Sound and Volume Control	1, 2	259, 267	128, 128
F2	Playable Whistle	3	275	120
F3	Whistles	16	379	120
F4	Brake	13	355	28
F5	Preset Drain Cocks	9	323	128
F6	Coupling / Uncoupling w. Shuffle	7	307	112
F7	Guards Whistle / Flange Squeal	15	371	104
F8	Heavy Load			
F9	Coast Mode			
F10	Coal Shovelling	5	291	100
F11	Blower / Ejector Control	24	443	40
F12	Coach Doors	12	347	96
F13	Injector	20	411	104
F14	Brake	13	355	28
F15	Safety Valve	14	363	128
F16	Water Tower / Coal Tower	4, 19	283, 403	124, 96
F17	Shunting Mode			
F18	Disable Brake Sound			
F19	Disable Momentum			
F20	AUX2 [1]			
F21	Not in use			
F22	Not in use			
F23	Not in use			
F24	Not in use			
F25	Not in use			
F26	Not in use			
F27	Not in use			
F28	Not in use			