



Flying Scotsman Function List

| F key | Function | Volume CV (CV 31 = 16, CV 32 = 1) |
|--------------|--|---|
| F0 | front light on/off | |
| F1 | sound on and volume adjustment | Chuffs 259,267 Rods 291 |
| F2 | playable whistle | 283 |
| F3 | short whistles | 275 |
| F4 | active brake, brake valves | Valves 355, squeal 259 |
| F5 | stationary: drain cocks disable/enable | 323 |
| F6 | long whistles (short press station approach whistle, long press fancy whistle) | 299 |
| F7 | flange squeal (when moving) or guard (stationary) | Flanges 371 / guard 331 |
| F8 | heavy load | |
| F9 | light engine | |
| F10 | coal shovelling | 419 |
| F11 | injector | Inj. 411, pipe rattle 435 |
| F12 | shunting: cab door train mode: coach doors slam | Cab 339, coach 347 |
| F13 | briefly: coupling long: uncoupling | 315 |
| F14 | active brake, brake valves | Valves 355, squeal 259 |
| F15 | safety valve | 363 |
| F16 | blower control | 443 |
| F17 | shunting mode | |
| F18 | disable brake squeal sound | |
| F19 | momentum off (acceleration/deceleration = 0) | |
| F20 | Aux 2 Seuthe smoker | |
| F21 | shunting: coaling tower train mode: water fill | Coal 387, water 403 |
| F22 | airpump | 379 |
| F23 | reserved | |
| F24 | active brake, brake valves | |
| F25 | AUX5 if enabled | |
| F26 | AUX6 if enabled | |
| F27 | AUX7 if enabled | |
| F28 | mute secondary sounds and random sounds | |