



WD 2-8-0/2-10-0 on ESU



Function	Volume Control CV
F0 Lights	CV31=16 CV32=1
F1 Sound on	Chuffs 259 & 267
F2 Whistle long (CV163=0, 1 or 2)	283
F3 Whistle short	275
F4 Active brake	291
F5 Draincocks	299
F6 Fancy Whistle	307
F7 Stationary: doors close and guard whistle / Move: flanges	Doors Guard W 435, Flange 355
F8 Blower/ejector	315
F9 Forced coasting sound	Set through Chuffs
F10 Coal shovelling (Aux 1)	331
F11 Injector	339
F12 Cab door (stationary)	363
F13 Coupler sound	499
F14 Whistle with echo	395
F15 Safety valve	371
F16 Water fill (stationary)	379
F17 Shunting mode with auto-coasting	-
F18 vacuum destroy	483
F19 Volume control	63
F20 Points transition (only if in shunting mode)	411
F21 Momentum off	-
F22 No brake squeal	-
F23 Sound fader	-
F24 Forced heavy load chuffs	-
F25 Seuthe Smoke Unit (if fitted on AUX2)	
F26 Buffer Clash (moving)	323
Brake Vacuum destroy sound	(CV32=1) 483
Brake Brake squeal sound	CV32=2 259
Brake Brake-on speed: CV 64 Brake-off speed: CV 65	
* Aux 2 possible by: CV 31 = 16, CV 32 = 1, CV 335 = 2 (default = 1)	
** Set Seuthe from Aux2 to Aux 1 by: CV 31 = 16, CV 32 = 9, CV 481 = 4 (default = 8)	
*** Swap F2 & F4: set (in exactly this order): CV31 = 16, CV32 = 3, CV386 = 16, CV418 = 1, CV434 = 1 Swap back: CV31 = 16, CV32 = 3, CV386 = 1, CV418 = 16, CV434 = 16	