



Locomansounds Class 20 Diesel Function List



	With engine off	With engine on	Stationary	When Moving	Random	Volume CV (CV32 = 1)
F0	Directional Lights	Directional Lights	Directional Lights	Directional Lights		
F1	Stop/Start Diesel Engine	Stop/Start Diesel Engine	Stop/Start Diesel Engine	Stop/Start Diesel Engine		259
F2	Directional High Horn	Directional High Horn	Directional High Horn	Directional High Horn		283.299
F3	Directional Low Horn	Directional Low Horn	Directional Low Horn	Directional Low Horn		291.307
F4	Directional Warning Horn	Directional Warning Horn	Directional Warning Horn	Directional Warning Horn		315.323
F5			Brake Dump	Manual Brake Application		411.419
F6		Coupling Sound / Aux 2	Coupling Sound / Aux 2			395
F7			Coach Door / Despatch Whistle	Flange Squeal		355 / 331
F8				Heavy Train Mode		
F9	Pre Heater					371
F10	Electric Priming Pump					379
F11				Buffer Clashes		347
F12		Radiator Fan /Aux 5	Radiator Fan /Aux 5	Radiator Fan /Aux 5	X	339
F13	Forced Cold Start			Forced Coasting		
F14		Compressor	Compressor	Compressor	X	387
F15	Spirax Valve	Spirax Valve	Spirax Valve	Spirax Valve		363
F16		Sound Fader	Sound Fader	Sound Fader		133
F17				Shunting Mode and Automatic Coasting		
F18				Momentum Off		
F19	Aux 3	Aux 3	Aux 3	Aux 3		
F20	Aux 4	Aux 4	Aux 4	Aux 4		
F21	Volume control	Volume control	Volume control	Volume control		
F22				Disable Brake Sound		
F23	Aux 6	Aux 6	Aux 6	Aux 6		
F24		Aux 1/ Steam Generator	Aux 1/ Steam Generator	Aux 1/ Steam Generator		
Auto				Brake Sound		259 (CV32 = 2) !!!