



Locomansounds Class 50 Diesel Function List



	With engine on	With engine off	When Moving	Stationary	Random	Volume CV (CV32 = 1)
F0	Directional Lights	Directional Lights	Directional Lights	Directional Lights		
F1	Stop/Start Diesel Engine	Stop/Start Diesel Engine	Stop/Start Diesel Engine	Stop/Start Diesel Engine		259
F2	High Horn	High Horn	High Horn	High Horn		291
F3	Low Horn	Low Horn	Low Horn	Low Horn		283
F4	High to Low Horn	High to Low Horn	High to Low Horn	High to Low Horn		275
F5			Manual Brake Application	Brake Dump		299 / 307
F6	Coupling Sound / Aux 2			Coupling Sound / Aux 2		395
F7			Variable Speed Flange Squeal	Coach Door / Despatch Whistle		323 / 331
F8	Heavy Train Mode		Heavy Train Mode			
F9		Pre Heater				371
F10		Electric Priming Pump				379
F11			Buffer Clashes			347
F12	Automatic Radiator Fan / Aux 5				X	339
F13		Forced Cold Start	Forced Coasting			
F14	Compressor				X	315
F15	Spirax Valve	Spirax Valve	Spirax Valve	Spirax Valve		363
F16	Sound Fader					133
F17			Shunting Mode and Automatic Coasting			
F18			Momentum Off			
F19	Aux 3	Aux 3	Aux 3	Aux 3		
F20	Aux 4	Aux 4	Aux 4	Aux 4		
F21	Volume control	Volume control	Volume control	Volume control		
F22		Vigilant				
F23	reserved					
F24	Aux 1/ Steam Generator					
	Brake Sound					259 (CV32 = 2) !!!