



Locomansounds Adams T3 Operation Instructions



F0: Lights (directional, if fitted)

F1: Sound on/off

Please read as follows as different selection of whistles are played by key selection instead of CV Values.

F2: SR main whistle playable – single note high pitch, if F12 selected, then SR dual whistle, or if in shunt mode (F17) then single note shunt whistle

F3: SR main whistle short – single note high pitch, if F12 selected, then SR dual whistle, or if in shunt mode (F17) then single note shunt whistle .

F4: Vacuum Brake in normal running, Steam brake if in shunt mode (F17)

F5: Drain cocks

F6: Fancy whistle (single note high pitch, if F12 selected, then SR dual whistle, or if in shunt mode (F17) then single note shunt whistle)

F7: Stationary: doors (on), guards whistle (off) F7: Moving: flange squeal (speed dependent), F7: Moving points

transition in shunt mode (F17)

F8: Buffer clash

F9: Forced coasting (loco exhaust will shut off and coasting sounds will play).

Remember, you can reset the decoder at any stage by programming a value of 8 into CV 8.

Overall volume control is through CV 63. Default setting is CV63=128, Max Volume is CV63=192

Volumes can also be set individually (see table below) after setting CV 31 = 16 and CV32 = 1